



2122	<b>IMPACTOR</b> <i>Impactor</i>
2123	<b>GUIA</b> <i>Guide</i>
2125	<b>GUIA</b> <i>Guide</i>
2126	<b>IMPACTOR PROPULSOR</b> <i>Impactor</i>
2129	<b>POSICIONADOR 20° - 60° - 100°</b> <i>Positioning Guide</i>
2130	<b>POSICIONADOR 30° - 70° - 80°</b> <i>Positioning Guide</i>

2131	<b>POSICIONADOR 40° - 50° - 90°</b> <i>Positioning Guide</i>
2132	<b>POSICIONADOR 70° - 90° - 110°</b> <i>Positioning Guide</i>
2133	<b>CINZEL PEQUENO PARA CRIANÇA</b> <i>Small Chisel For Children</i>
2134	<b>CINZEL MÉDIO PARA ADOLESCENTE</b> <i>Medium Chisel For Adolescent</i>
2135/01	<b>IMPACTOR EXTRATOR PARA PLACAS - CRIANÇA</b> <i>Impactor Extractor For Plates - Children</i>
2135/02	<b>IMPACTOR EXTRATOR PARA PLACAS - ADOLESCENTE</b> <i>Impactor Extractor For Plates - Adolescent</i>